

User Manual

You can connect FM Modulator with any kinds of stereo audio such as VCR, CDP, DVD and etc.

It will play rich and closed sound satisfying you.

Method of use ;


1. Connecting "ANT in" terminal to Antenna of the vehicles.
2. Connecting "ANT out" terminal to "ANT in" terminal of the car stereo cassette.
3. Connecting Power terminal to 12V power input in the vehicles.
4. Connecting each L, R signal of the audio like VCR, CDP, DVD, etc.
5. Tuning FM frequency you want with up / down switch and setting the same frequency on the car stereo FM frequency.

Remarks ;

1. Please avoid close Radio broadcasting channel when you set up FM frequency.
2. Channel Memory will be stored 5sec. after frequency setting.
3. In case of low or high sound, please adjust volume control in the bottom side of the unit.
4. The unit is set up on 88.3MHz when you purchase.

Electrical Parameter ;

1. Input voltage : 12Vdc
2. Phase Locked Loop RF Tuner output
3. Frequency range : 87.5MHz ~ 97.5MHz
4. Frequency Band : 100KHz (100Channel)
5. FND display for viewing channels
6. Shielded metal housing for noise rejection

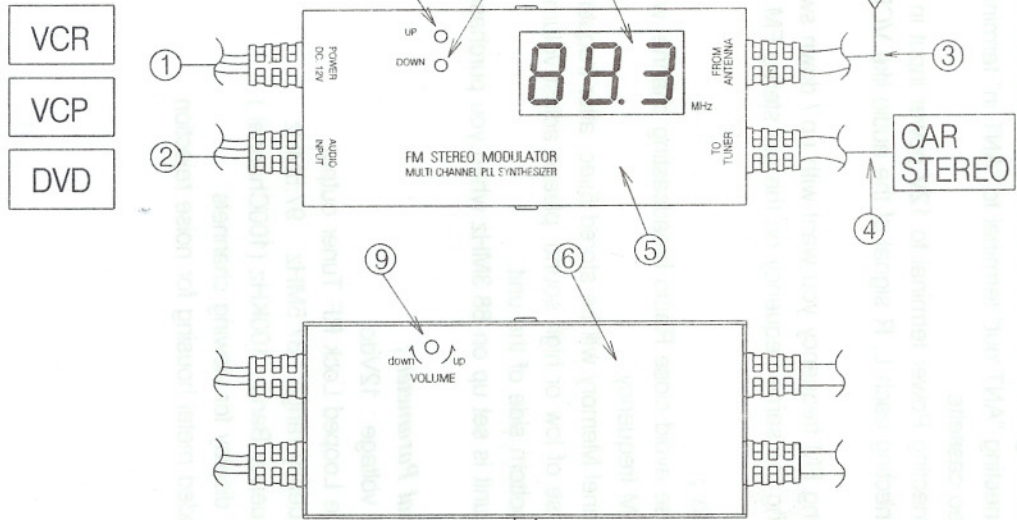

1. Power in : 12VDC
2. Audio input
3. Antenna input
4. Antenna output
5. Top position
6. Bottom position
7. Channel up switch
8. Channel down switch
9. Audio volume
10. FM Frequency display